



# FALCON RIDGE

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226  
800-213-7981

## **Instructions for Installation of Bush Hog Trail Hunter** **2-Piece Aero-Vent Polycarbonate Windshield**

BH-4400-WD03


Be sure to read these instructions thoroughly before opening and installing the Polaris Ranger Polycarbonate Windshield.

1. Check over the parts included in the carton with the parts list shown below:


1 ¾" Loom Clamps	6 each
1 1/2" Loom Clamps	2 each
1" Bolts	9 each
Plastic Thumbnuts	9 each
Shoulder Bolts	4 each
Teflon Dots	4 each
Washers	9 each
40" Rubber Gasket	1 each
43" Rubber Gasket	1 each
Polycarbonate Vent Slider	1 each
Polycarbonate Windshield	2 Pieces

**If any parts are damaged or missing please contact customer service at (800) 213-7981.**


2. Begin by removing the entire windshield assembly and lay it flat on a clean surface. Get the included 43" rubber gasket and install it along the bottom curved part of the small windshield section. Peel back the protective film along to expose the material. Starting at one end press the gasket firmly along the bottom edge, making sure that it is pushed all the way on. Next install the 40" rubber gasket across the top of the same piece using the same method. If it does not seem to be holding strong, you can squeeze the gasket together and reinstall to get a better hold. The diagram below shows how it should look when finished but is not a true model of the Trail Hunter Windshield.

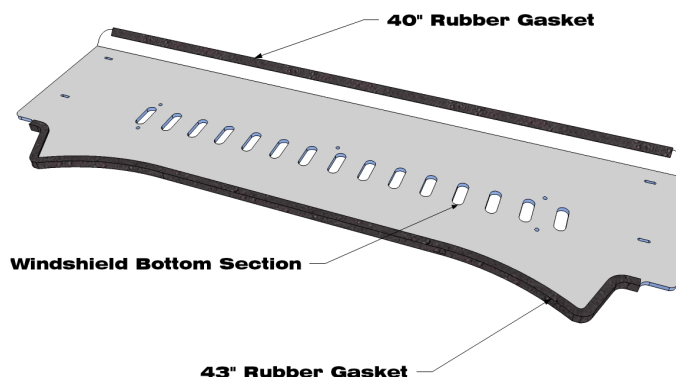


3. Next install the Polycarbonate Vent Slider to the inside face off the bottom section. Begin by removing the protective masking and place the Teflon dots in the corners as shown in the diagram below.

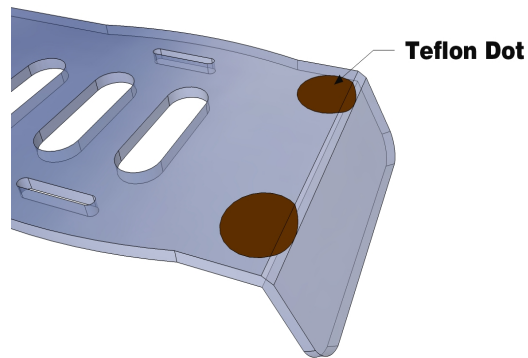


4. Now place the Vent Slider to the Bottom section on the inside face of the windshield as shown in the diagram below. **Be sure not to over-tighten the shoulder bolts as this will cause the threaded inserts to spin loose in the Polycarbonate.** Just snug those in place with an Allen wrench or finger tight will work.

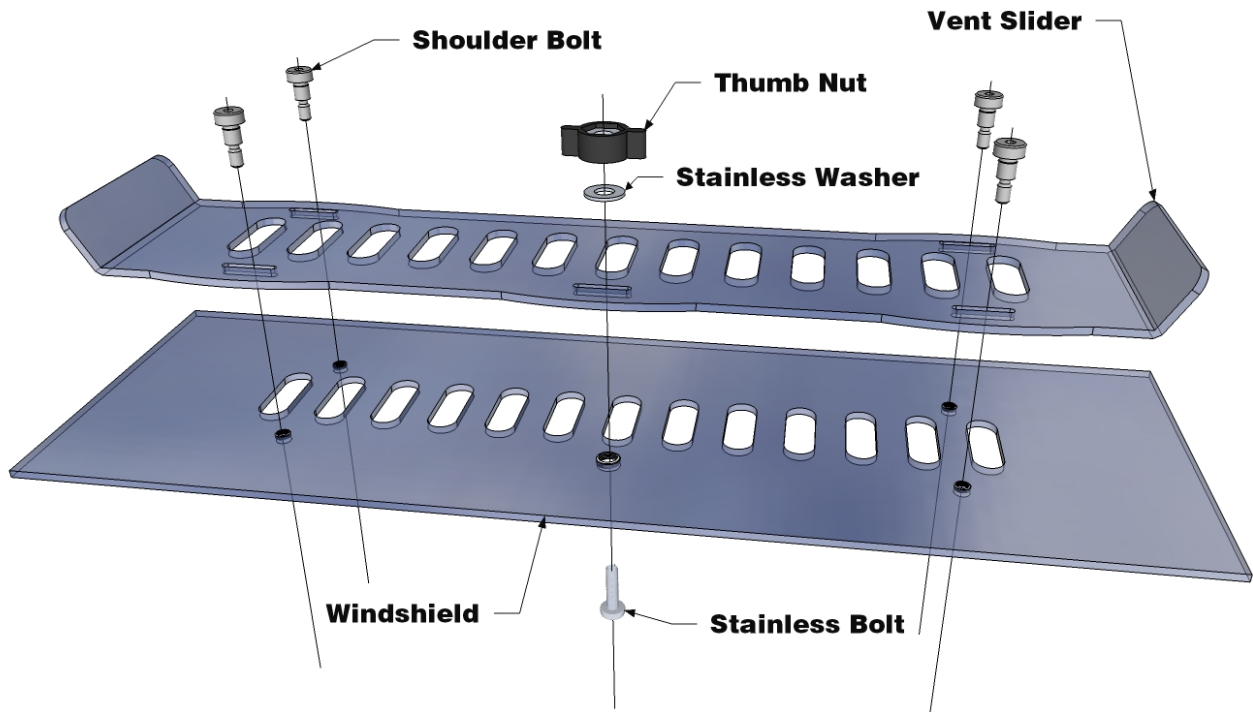

5. Now the bottom section of the windshield is ready to be clamped to the frame of the Trail hunter using four 1 3/4" clamps, four 1" Bolts, four Washers and four Plastic Thumbnuts as shown in the diagram below.

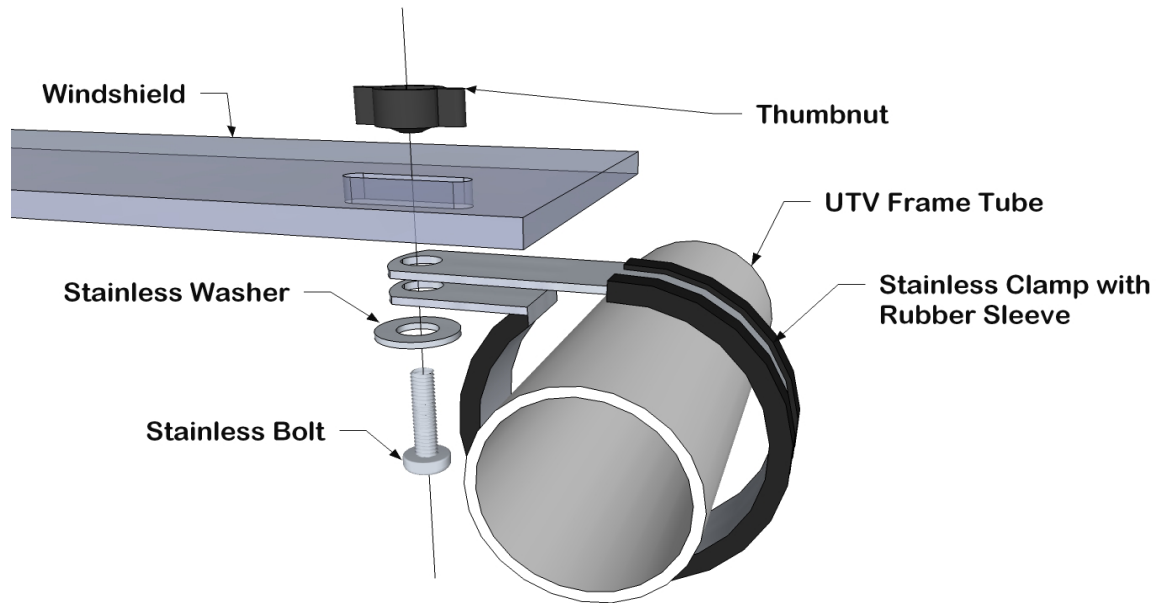

6. Now install the top section of the windshield using the same method as the bottom section with the only difference being that the clamps used for the slanted portion at the top are 1 1/2" clamps. Note: The bend at the top of the windshield should be facing toward the rear of the UTV and be placed under the Roll cage at the top. When finished it should look very similar to the diagram below. **Note: Top brace not included in Bush Hog Trail Hunter Windshield.**

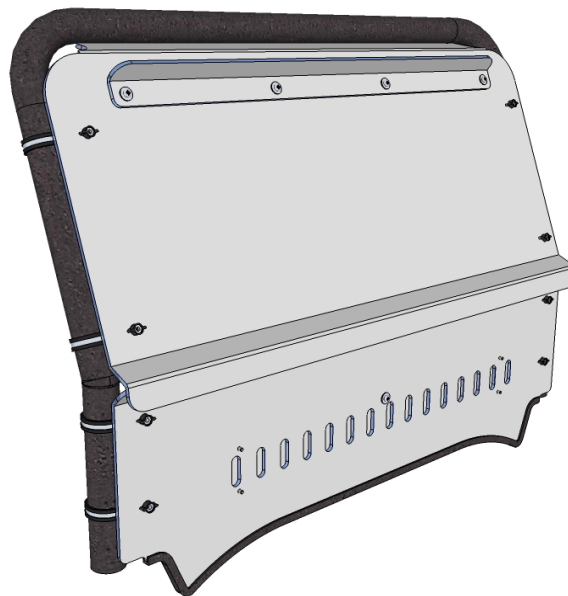

7. A plastic cleaner and polish is available from Falcon Ridge that will help reduce dust buildup and fingerprints. Just give us a call at 800-213-7981.

**Thank you for your purchase!**

## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Falcon Ridge please call at 800-213-7981 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge's many distributors, you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.