



FALCON RIDGE

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226
800-213-7981

Instructions for Installation and Care of
2010 Kawasaki Teryx Soft Door/Rear Window Combo
KAW-2010TERYX-DRW01

CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70°F or warmer. If installed outside and in the cold weather, warming the adhesive Velcro strips inside just before installation is recommended.

1. **It is necessary to remove the windshield and hardtop (if applicable) prior to installing the soft cab enclosure.**
2. Carefully open the carton and roll out the enclosure on a large flat surface that is clean and free of dirt or other material that may soil the textile or scratch the clear vinyl windows of the enclosure.

Check over the parts included in the carton with the parts list shown below:

Velcro hook strips	2 each	12" long
Velcro hook strips	20 each	3" long
Velcro hook strips	1 each	25" long
Velcro hook strips	2 each	10" long
Snap studs	13 each (1 extra)	
Cab enclosure	1 each	

3. Clean the roll cage tubing with rubbing alcohol. Begin by placing adhesive Velcro strips at 4 critical locations to get the cover in place and help locate the proper positions for the remaining Velcro strips. **a)** The 25" piece is centered across the top bar. **b)** The two 10" pieces go across the bottom of the rear on either side. **c)** The two 6" pieces go on both sides of the front of the roll cage where it connects with the front fenders. Refer to the photos below for reference.


a)



b)




c)

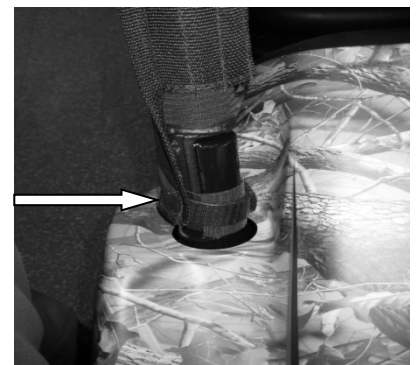

- b) Now get an assistant and attach the enclosure at points **a**, **b**, & **c**, making any necessary adjustments to get the enclosure centered and in proper position.
- c) Running down along the front of the enclosure are tabs that are made to be compatible with all hard windshields regardless of manufacturer. To use with your windshield you must mark the locations of your windshield's attachment hardware relative to the roll cage tube and then cut the Velcro tab away at these locations. Give these cuts at least ½" wiggle room on either side of each piece of attachment hardware for best results. You must then use a lighter to melt the edges of the tab at the cuts to prevent fraying. See photo below.



- d) Along the top of the doors there are two 5" Velcro loop tabs that should be attached as shown in the photo below. Place the matching adhesive Velcro strips on the roll cage and attach at these points. See photo below.

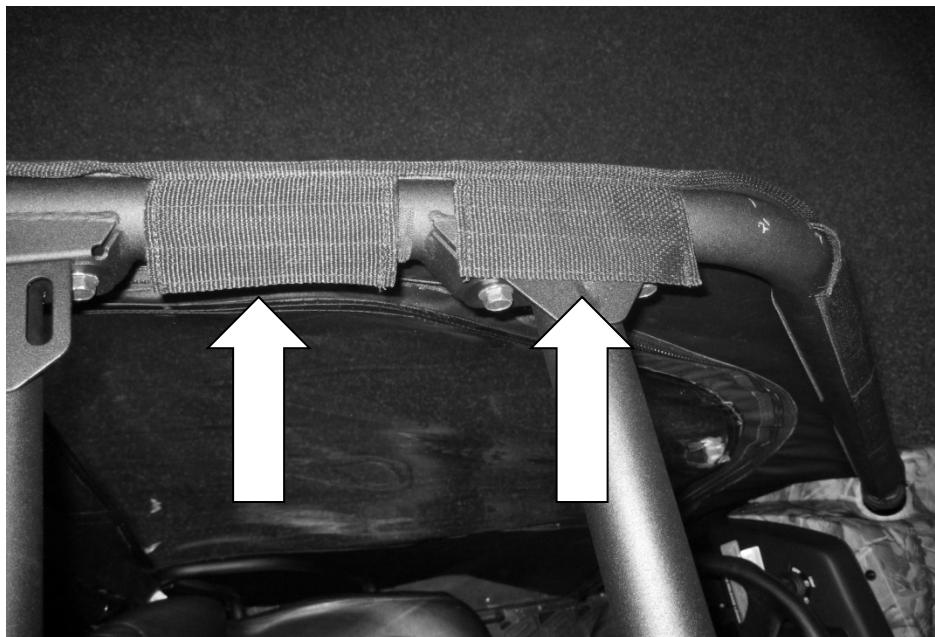

- e) Next you will see a 12” Velcro tab running down the rear of the enclosure. Place the matching adhesive Velcro strip on the roll cage and pull the rear window tight side to side. See photo below.



- f) Mark the desired locations for the stud snaps on the insides of the front fenders and the bottom rear of the door. Then install the stud snaps to the bodywork using a #2 Phillips screwdriver.
- g) To open and stow the doors, move the zipper fully rearward and fold the bottom portion of the doors up. Then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2” in diameter to ensure minimum protrusion while stowed.

Cleaning and Storage Recommendations:

1. Before removing the cab for storage, make sure it is clean and dry, to prevent soiling the textile and scratching the clear vinyl side/rear windows. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Let the cab dry thoroughly before attempting to roll for storage.
2. It is important that the cab be rolled up for storage rather than folding. Folding will cause undesirable creasing of both the cab textile and the clear vinyl side/rear windows. Carefully roll up the cab similar to the way it was when it was packed at the factory. On a large, clean, and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the cab into a roll approximately 8” in diameter. Put the rolled cab back into the carton for storage at a normal room temperature. It is best not to expose the cab to either extreme hot or cold temperatures when storing.

3. A special cleaner/conditioner is available from Falcon Ridge that will greatly increase the service life of the cab enclosure. If needed, additional hook and loop sets are available, as well as other spare parts and hardware. Contact Falcon Ridge for information.
4. Transporting or trailering your UTV with the enclosure installed is not generally recommended. It is best to remove the enclosure before transporting your UTV.

Thank you for your purchase!

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Falcon Ridge please call at 800-213-7981 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge's many distributors, you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.