



FALCON RIDGE

3510-1 Port Jacksonville Pkwy, Jacksonville, FL 32226
800-213-7981

Instructions for Installation and Care of
Mahindra Roxor
Soft Door Rear Window Combo
MAH-ROXOR-DRW01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

	<u>Doors</u>
Adhesive Velcro Hook Strips:	18 each-----3”
“ “ “ “	2 each-----6”
“ “ “ “	2 each-----45”
	<u>Rear Window</u>
“ “ “ “	1 each-----45”
Cab Enclosure	3 panels

The cab will be put together using the following parts and in this order.

- 1) Soft Doors
- 2) Rear Window

Note: You will need to remove the windshield prior to installation of the cab enclosure

1. Begin by placing the 45" adhesive Velcro strip down the back side of the middle vertical bar of the roll cage. The photo below shows how this should look.




2. Next place the 6" adhesive Velcro strips on the front of the roll cage where the windshield bolts on. Place the strip just above the bottom hole making sure you don't cover the holes up. See photo below.




3. Take the door and attach it to the roll cage so the double-sided tab along the back of the door and the 6" tab on the front of the door line up with the adhesive strips you just installed.



4. Now take the 3" adhesive strips and place one on the inside of the roll cage where each of the double-sided Velcro strips are sewn along the edges of the top and front of the door. The following pictures show how this works.

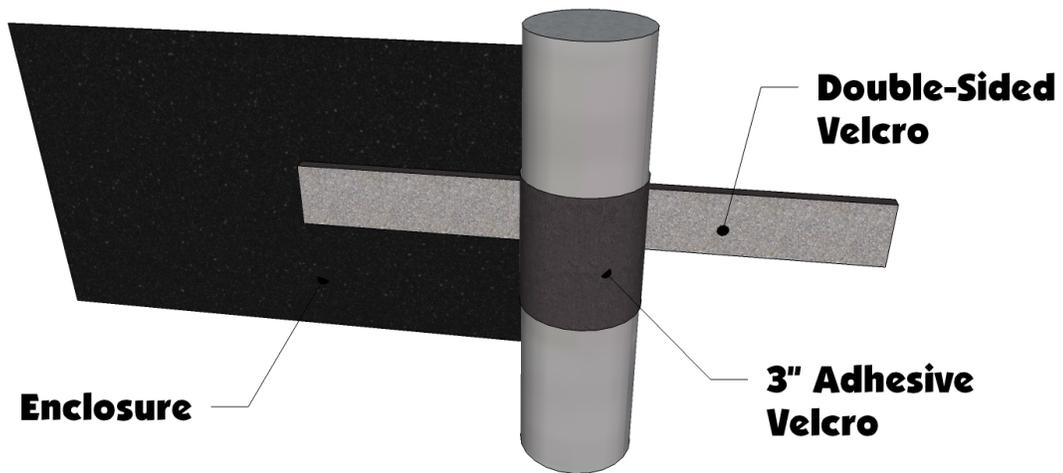


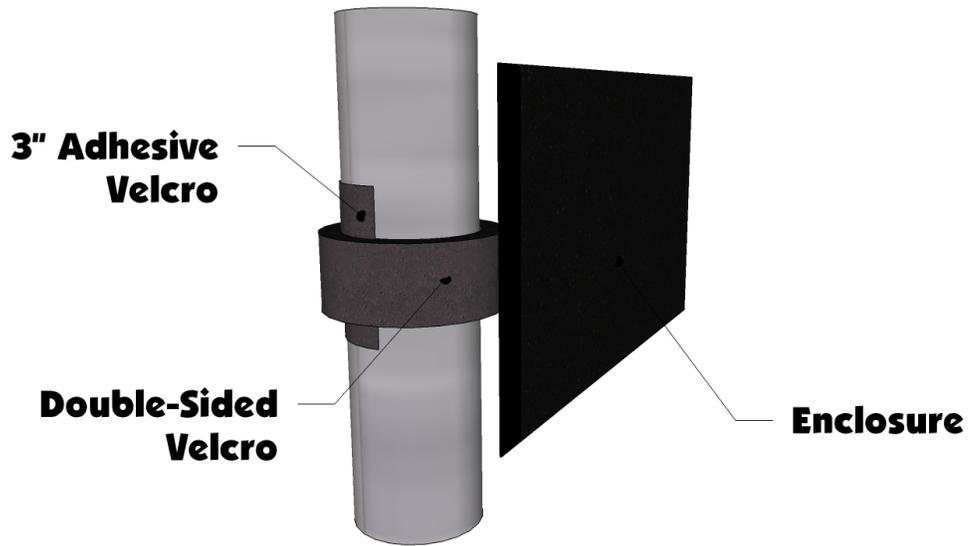

5. Now take the bottom of the door and pull it down so all the magnets are in the proper place.

REAR WINDOW

6. Now take the remaining 45" adhesive Velcro strip and run it across the top of the top rear bar as shown in the photo below.

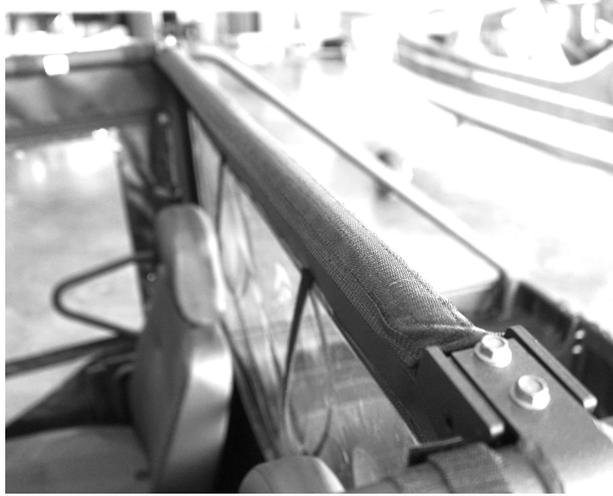

7. Then place the Rear Window on the window by centering the panel and attach at the top first then the sides will attach to the double-sided tabs of the doors. The bottom of the panel simply attaches to the floor with magnets. See photos below.



Cleaning and Storage Recommendations:

1. Before removing the Falcoln Ridge Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.

2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

3. A special cleaner conditioner is available from Falcoln Ridge that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.