


FALCON RIDGE UNIVERSAL UTV HORN KIT


Horn Installation

Locate a space under the hood where you want to install the horn, then mount the horn using the provided hardware.

Connect the horn wire leads to the horn. See Wire Diagram.

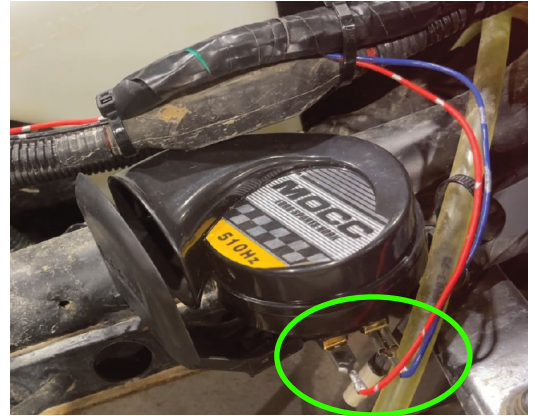


Wire Diagram

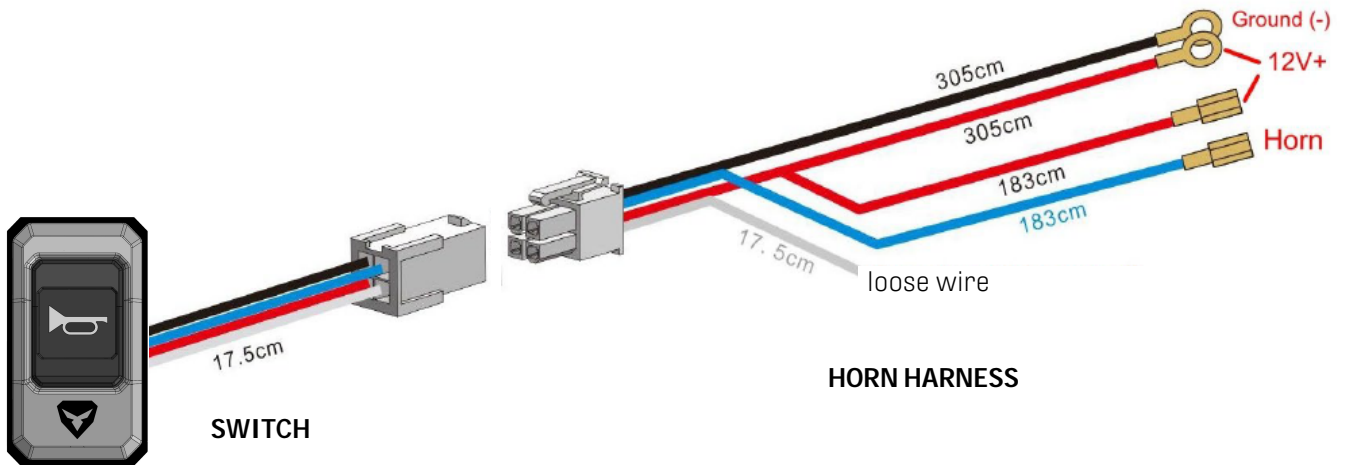

Switch Installation

Locate an empty switch knock out on the dash, inside the UTV. Feed the wire harness from the horn through the knock out and attach the switch using the connector. Push the wiring back through the knock out until the switch snaps into place.

After you have confirmed the horn works, go back through and confirm all wire connections are secured.

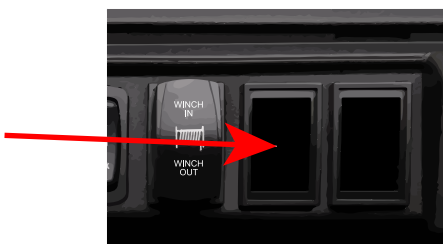

If you are having any issues with your Falcon Ridge product, please reach out to Falcon Ridge customer service toll free at 800-213-7981 or info@falconridge.com



FALCON RIDGE
A Nivel Company
3510-1 Port Jacksonville Pkwy
Jacksonville, FL 32226